


**PRIMING**

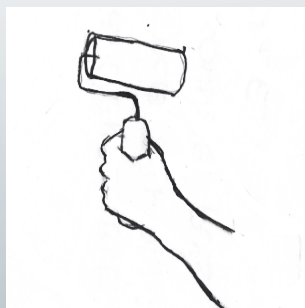


Apply one coat of “Fond de Teint” (or “Restart” for non-absorbant surfaces) using a roller.

Drying time : 4 hrs

**1ST COAT OF IMPASTO**

Using a stainless steel trowel apply a coat of impasto in a very fine layer. Hold your trowel at a slight angle to the wall and “scratch” on the impasto onto the wall. Work in square metre patches starting from the top left corner of your wall.  
Drying time : 4 hrs

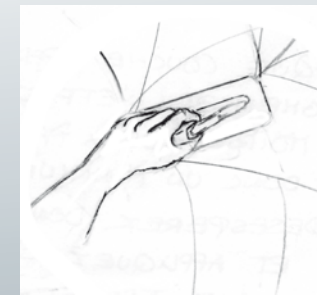

**2ND COAT OF IMPASTO**

Once your first coat of impasto has dried apply a second coat in exactly in the same manner.



**FERRAGE / POLISHING**

Once you have applied impasto to the whole wall you may start the polishing process. Using the same trowel but which is clean and dry and without using any impasto repeat the same movements. The stainless steel trowel will polish the impasto revealing slight colour differences and giving it an elegant sheen



**TO PROTECT YOUR WALLS AND MAKE THEM COMPLETELY WATER RESISTANT  
APPLY 1 COAT OF LIQUID WAX.**