




# STARDUST



# HOW TO - TIPS & ADVICE

## PREPARATION

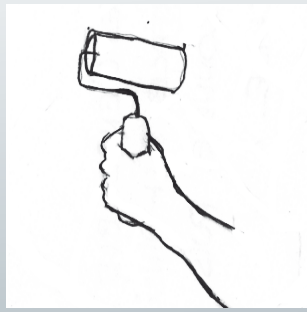


Apply one coat of our premium quality primer "Fond de Teint" (or "Restart" for non-absorbant surfaces) using a roller.

Drying time : 4 hrs

## 1 COAT OF STARDUST

Use a clean stainless steel trowel to apply the stardust paste onto your walls. Use in the same way as you would any ordinary plaster, keeping the trowel at a slight angle to your surface. Apply to the whole surface of your wall.

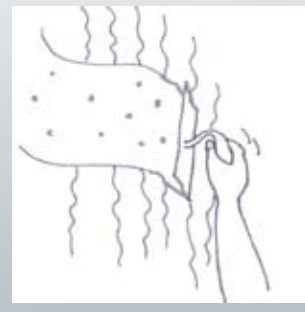


## RE-WORKING BEFORE DRYING...

Before the STARDUST dries completely (10 - 15 minutes), come back onto your surface with the same trowel but without any stardust onto it to slightly scratch the surface of the nearly dry paste. This will reveal all the small mineral and mica particles present in our STARDUST.



## OR AFTER DRYING

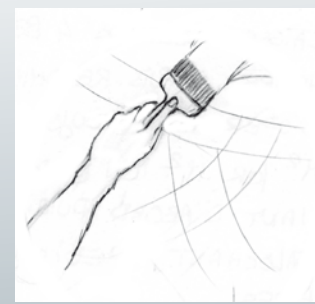

You also have the option to leave stardust dry completelt (24 hours) and then, using a brush and clean water lightly brush all over your surface to reveal these particles.

**IF YOU WANT TO RENDER YOUR SURFACE COMPLETELY NON-ABSORBANT AND IMPERMEABLE APPLY 1 OR 2 COATS OF OUR ACRYLIC MAT VARNISH**